
 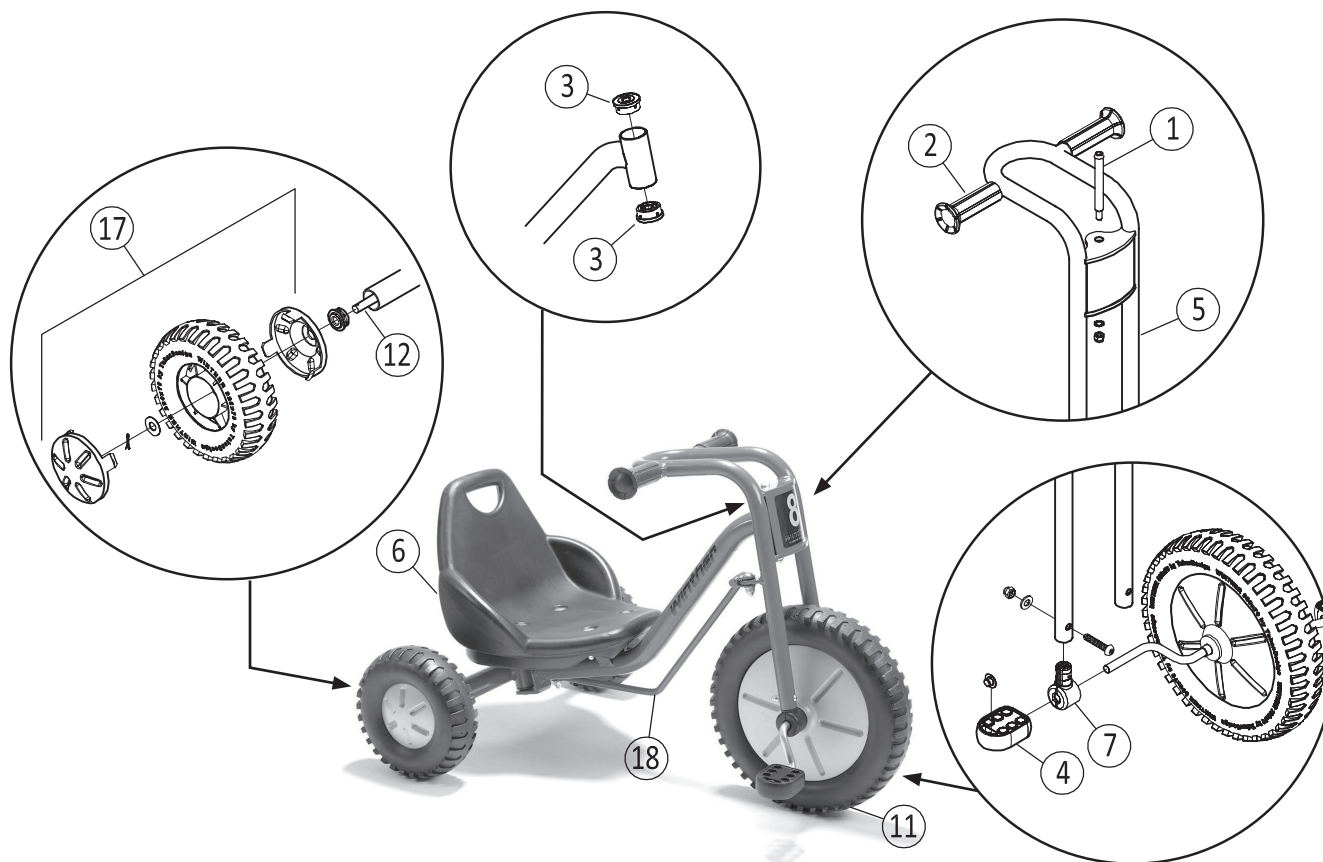

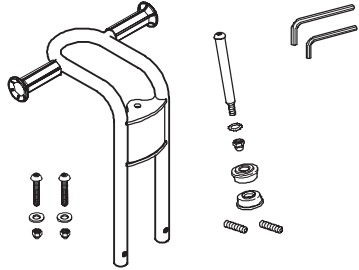
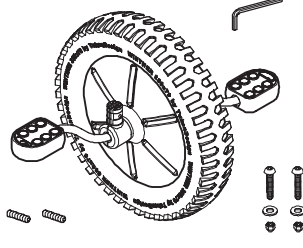
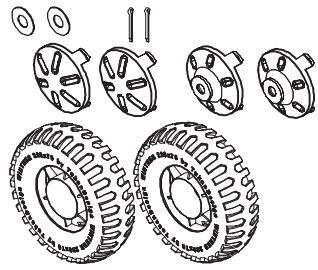
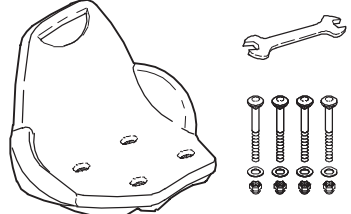


Ersatzteile für:

112122

VIKING EXPLORER Zlalom Tricycle

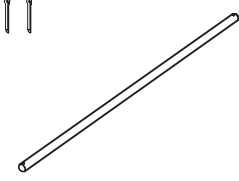


Pos.		Pos.		Pos.	
1	 x1	7	 x2	13	
2	 x2	8		14	
3	 x2	9		15	
4	 x2	10		16	
5		11		17	
6		12		18	

Ersatzteile für:

112122

VIKING EXPLORER Zlalom Tricycle

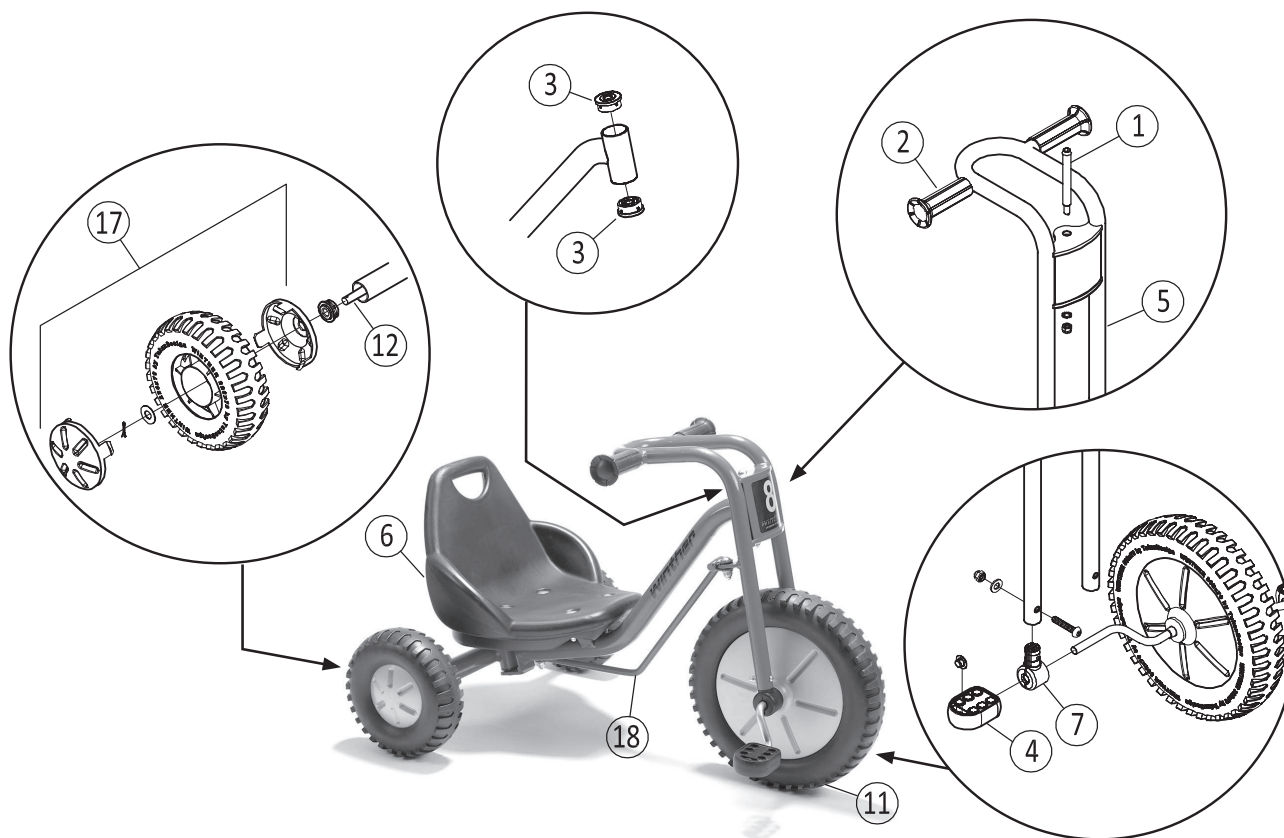

	661.00			
	Version			
Pos.	2.2			
1	50743			
2	50538			
3	50744			
4	-			
5	50780			
6	50597			
7	50506			
8	50510			
9	-			
10	-			
11	50781			
12	50660			
13	-			
14	-			
15	-			
16	-			
17	50782			
18	50783			