


 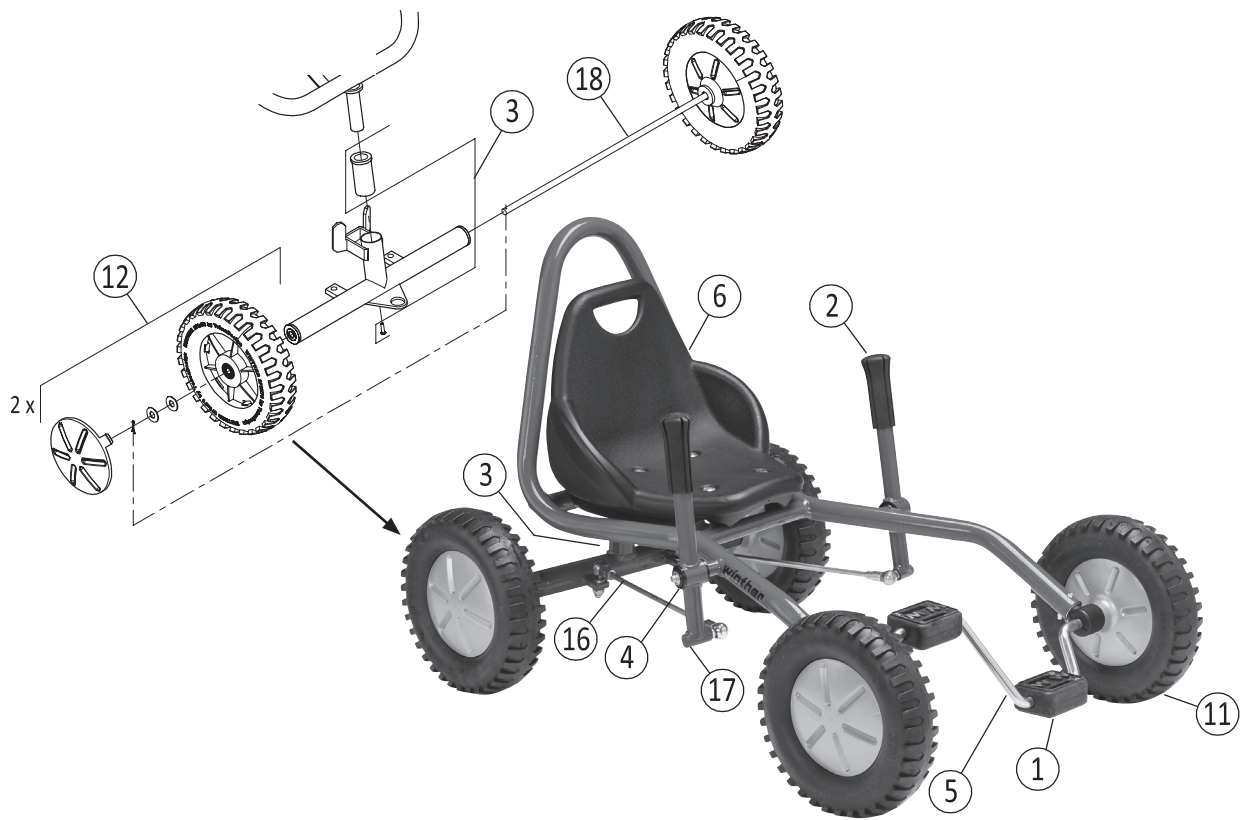




 





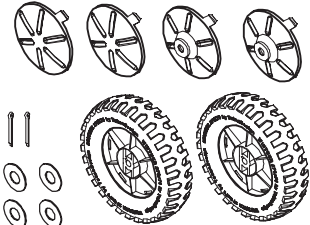
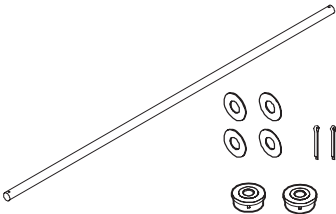


Ersatzteile für:

112102

# Viking EXPLORER Fun Cart Large

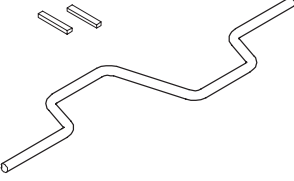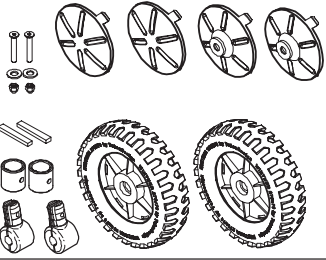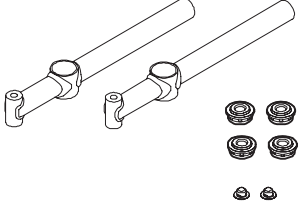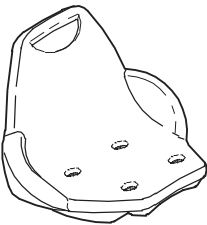


Pos.		Pos.		Pos.	
1	 x1  x4	7		13	
2	 x2	8		14	
3	 x1  x1	9		15	
4	 x4  x2	10		16	
5		11		17	
6	 	12		18	

Ersatzteile für:

112102

Viking EXPLORER Fun Cart Large

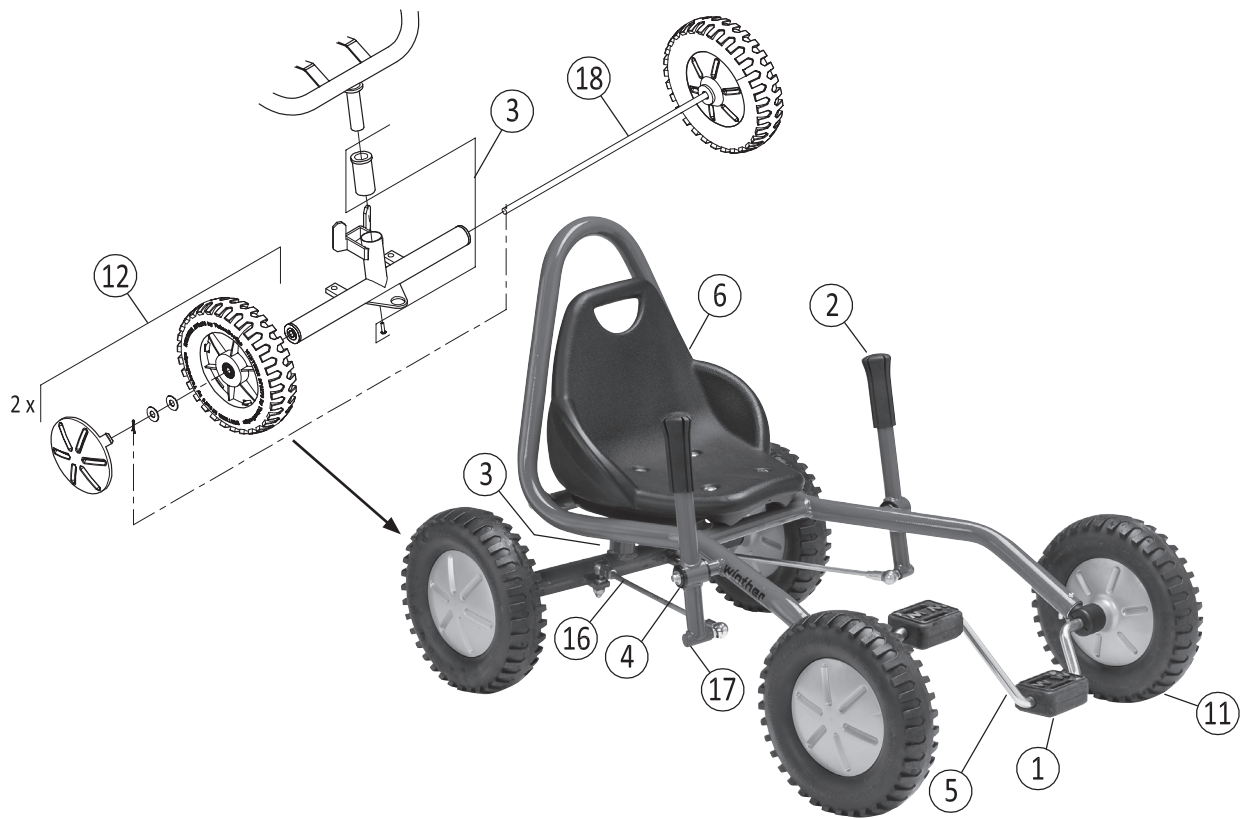

	487.00			
	Version			
Pos.	1.0			
1	50802			
2	50902			
3	50755			
4	50756			
5	50757			
6	50758			
7	-			
8	-			
9	-			
10	-			
11	50759			
12	50760			
13	-			
14	-			
15	-			
16	50763			
17	50762			
18	50761			