


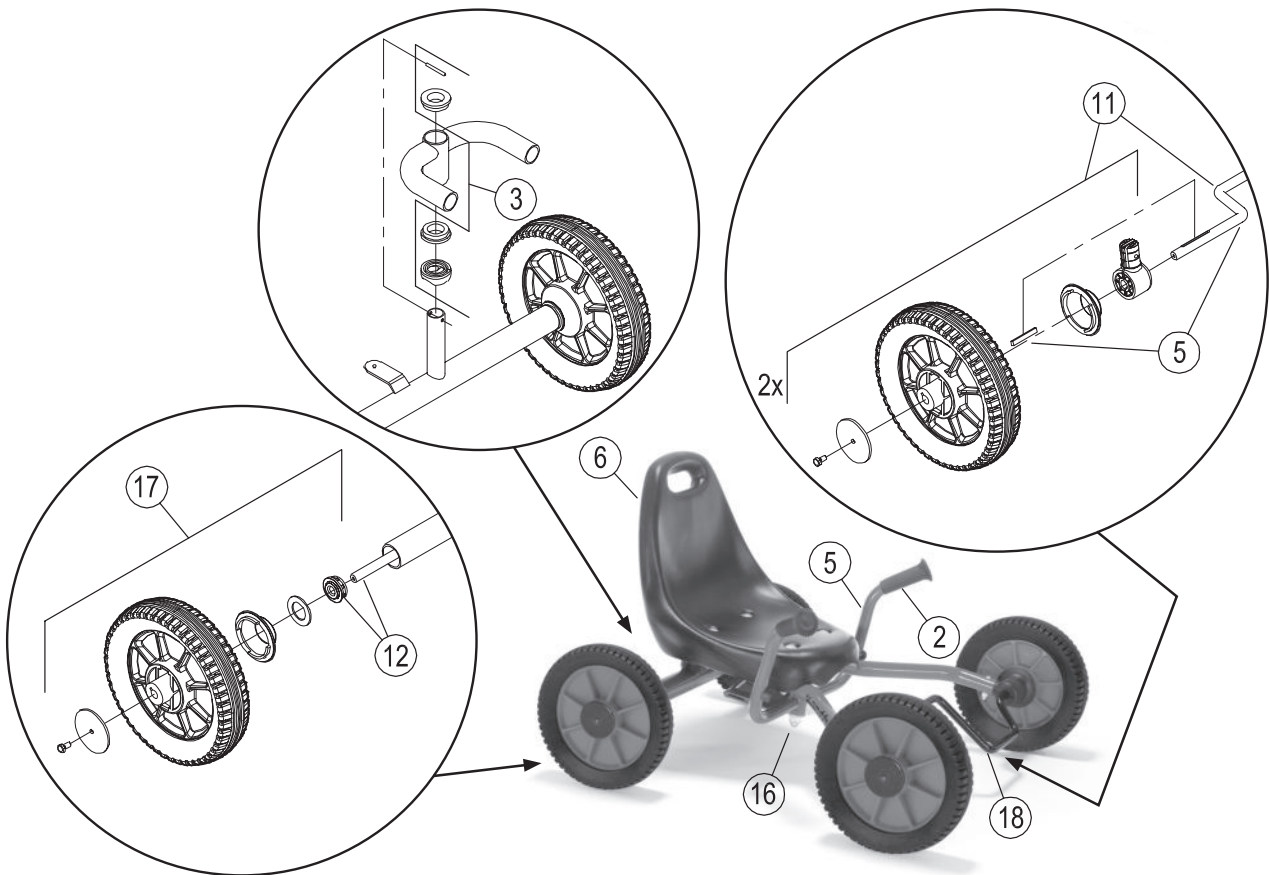


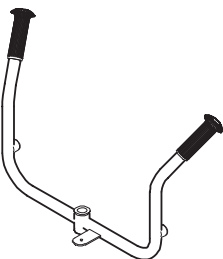
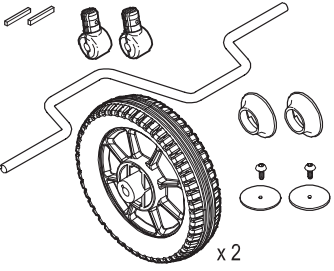
 

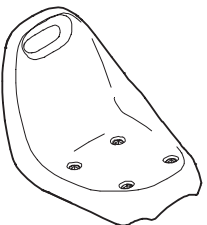
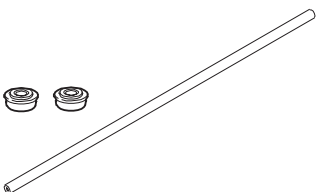
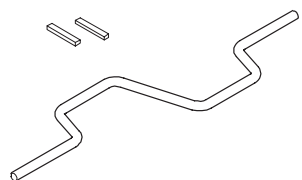


Ersatzteile für:

112111

VIKING Fun Cart




Pos.		Pos.		Pos.	
1		7		13	
2	 x2	8		14	
3	 x2  x1  x1	9		15	
4		10		16	 x2
5		11		17	  x2
6		12		18	

Ersatzteile für:

112111

VIKING Fun Cart

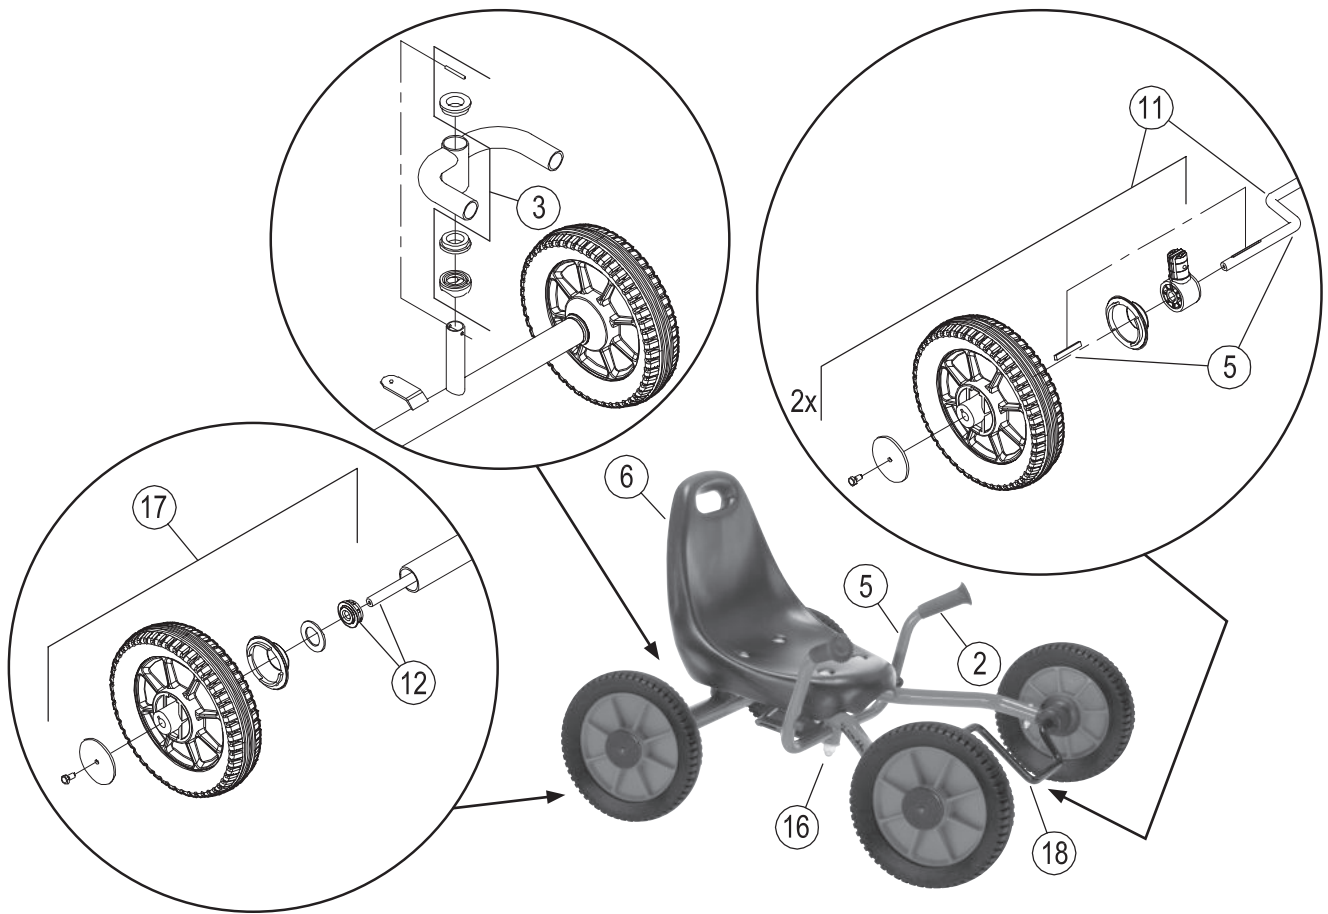

	498.00		498.00		
	Version		Version		
Pos.	1.0	2.0	2.1		
1	-	-	-		
2	-	50001	50001		
3	-	50662	50662		
4	-	-	-		
5	-	50667	50667		
6	-	50664	50664		
7	-	-	-		
8	-	-	-		
9	-	-	-		
10	-	-	-		
11	-	50665	50665		
12	50670	50668	50668		
13	-	-	-		
14	-	-	-		
15	-	-	-		
16	-	50661	50661		
17	50669	50666	50666		
18	-	50663	50663		