
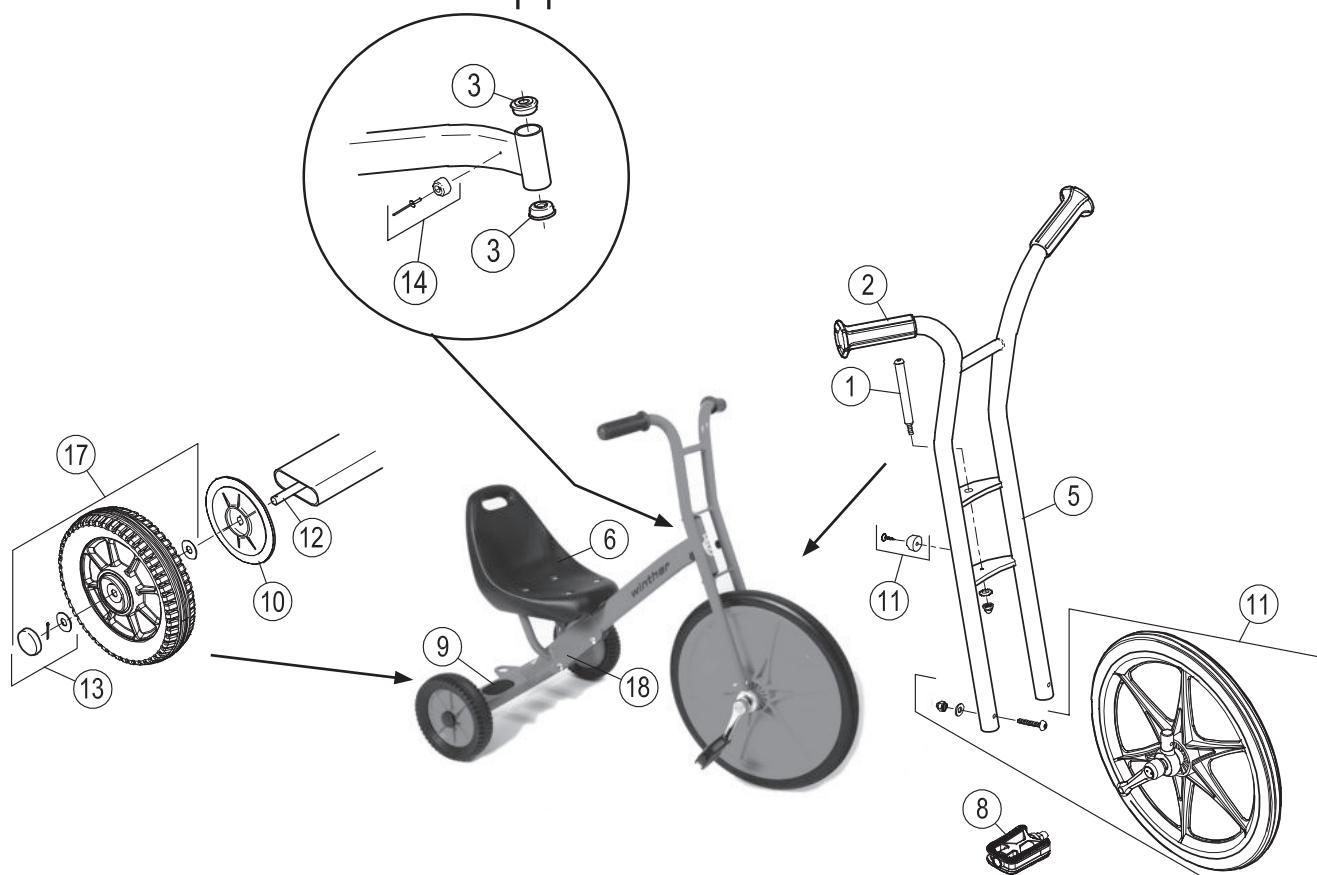
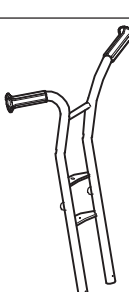
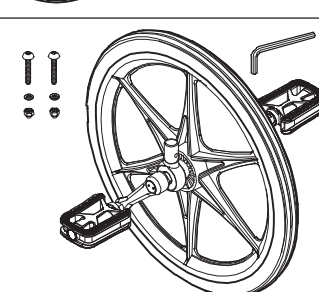
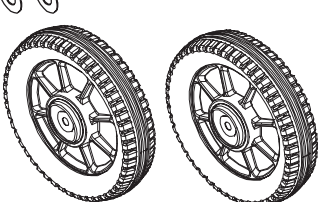
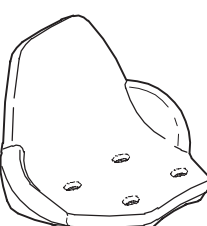
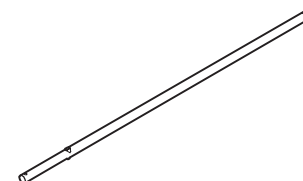


Ersatzteile für:

112142

VIKING EXPLORER Chopper

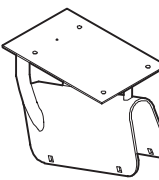


Pos.		Pos.		Pos.	
1	 x1  x2  x1	7		13	 x4  x2  x2
2	 x2  x2	8	 x1  x1	14	 x2  x2
3	 x2	9	 x2	15	
4		10	 x2	16	
5	    	11		17	   
6	   	12	 	18	 

Ersatzteile für:

112142

VIKING EXPLORER Chopper

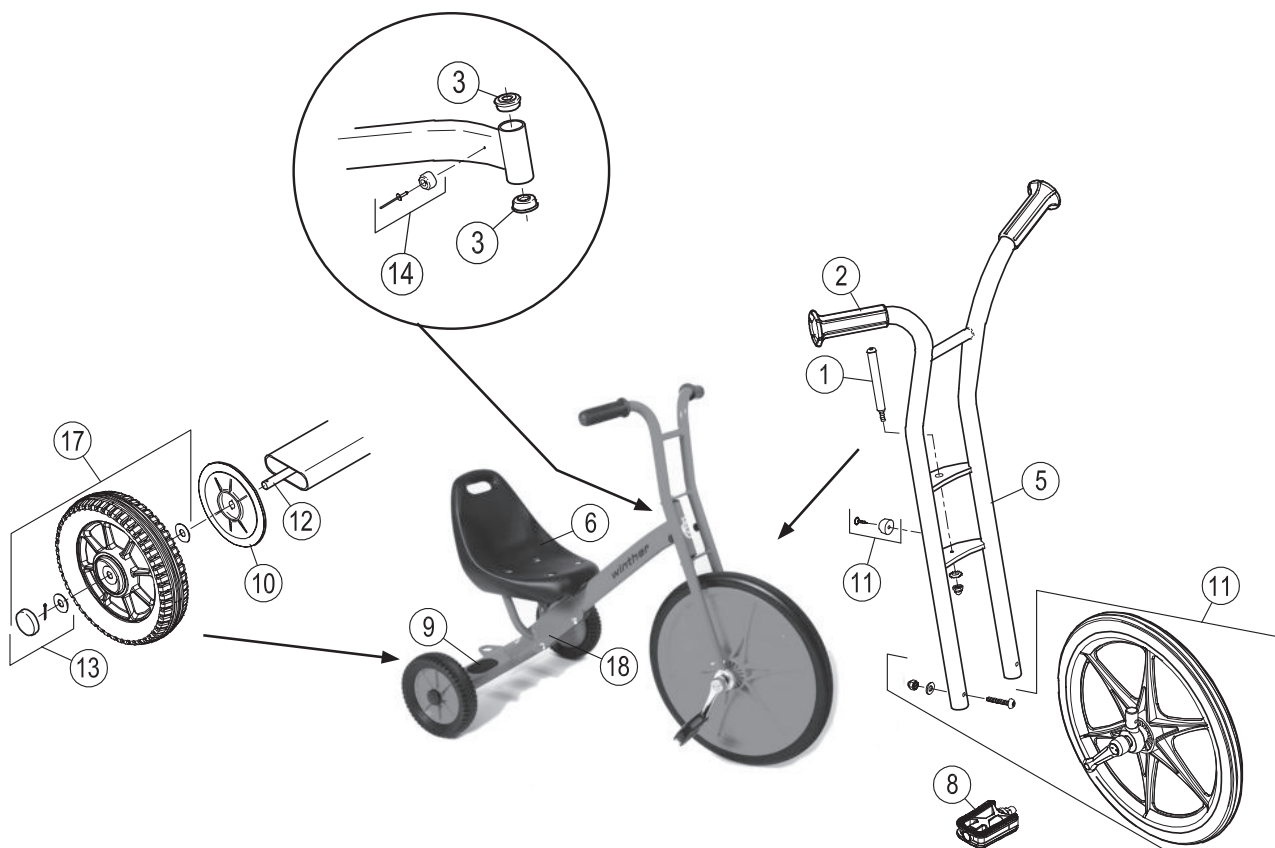

		489.00			
		Version			
Pos.	1.1				
1	50502				
2	50503				
3	50504				
4	-				
5	50559				
6	50758				
7	-				
8	50710				
9	50511				
10	50519				
11	50657				
12	50514				
13	50520				
14	50531				
15	-				
16	-				
17	50571				
18	50658				